



Nashi iSmart

From the Box to Comfort

Your Guide to Mastering the Smart Toilet



Safety First: Essential Principles

Please read these safety precautions carefully to ensure correct use. Follow all important instructions for your safety.

Electrical Safety

This is an electrical product. To reduce the risk of electric shock, follow these rules.



Do not install in highly humid areas without adequate ventilation.



Do not touch the plug with wet hands.



The earth wire must be connected correctly.

Water Precautions

Water and electricity do not mix.



Do not splash water on the product body or the plug.



Do not immerse the remote control in liquids.

General Use



Supervise children and anyone who needs assistance during use.

Installing the Bidet Toilet Seat

Quick and Easy Installation



Hygiene, comfort and well-being at home

- Clean, fresh water
- Easy installation
- Better hygiene every day



Contents



Bidet toilet seat



Filter




Adapter



White tube

Correct Connection

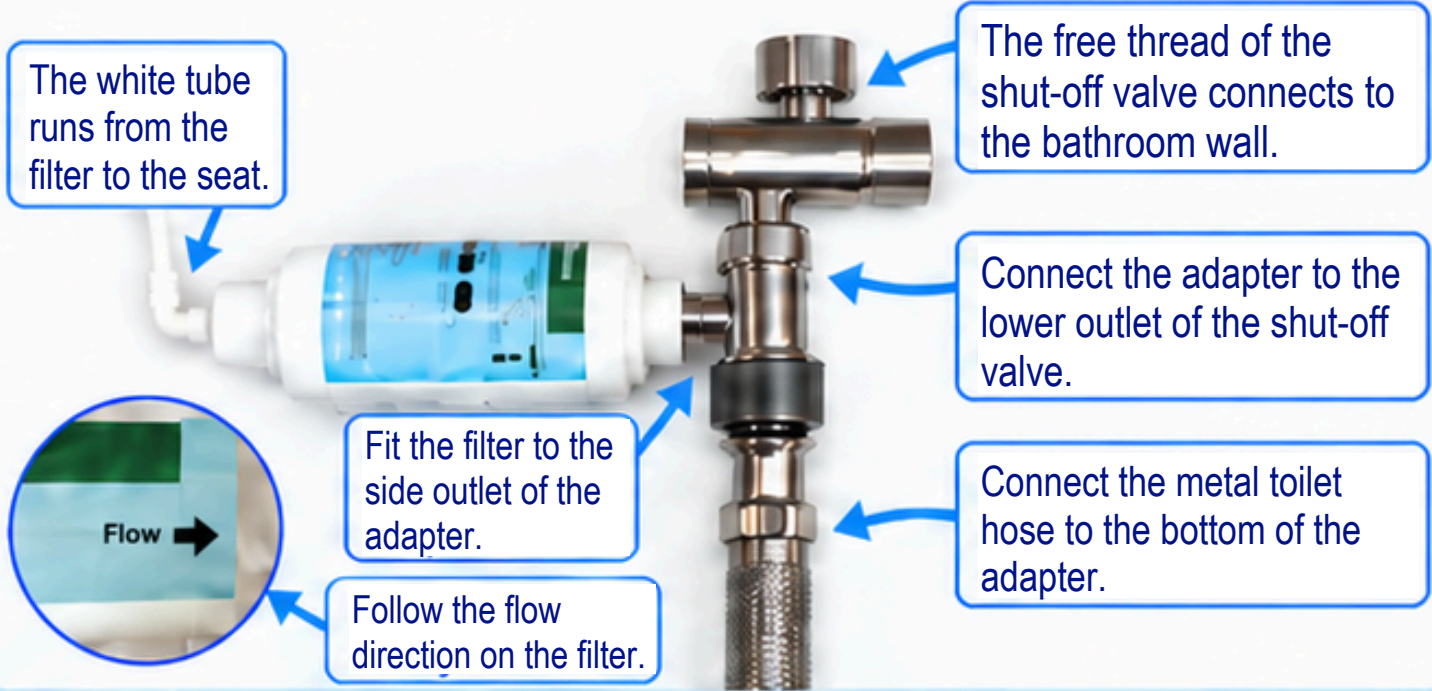

Installation Steps

Follow these 5 steps to enjoy your bidet toilet seat

- 1** Close the shut-off valve

Close the shut-off valve supplying water to the toilet.
- 2** Connect the adapter

Connect the adapter to the lower outlet of the shut-off valve.
- 3** Attach the toilet hose

Screw the metal toilet hose onto the bottom of the adapter.
- 4** Connect filter and tube

Screw the filter into the adapter. Fit the white tube using the elbow supplied.
- 5** Fit the seat; check for leaks

Place the seat on the toilet and check that there are no leaks.

Side Control



Turn the knob to select the desired function:

- Rear wash
- Feminine wash
- Water pressure
- Stop



Your daily hygiene




A more comfortable home



Your well-being matters


Initial Check: Confirming a Perfect Connection

Power

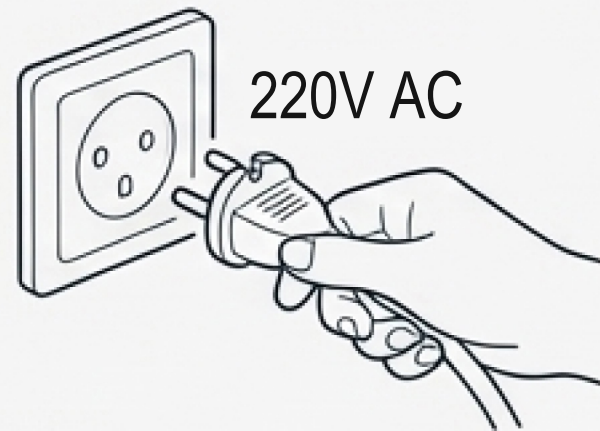


220V AC

1. Plug in securely:
Make sure the three-pin plug is firmly connected to an earthed 220V socket.

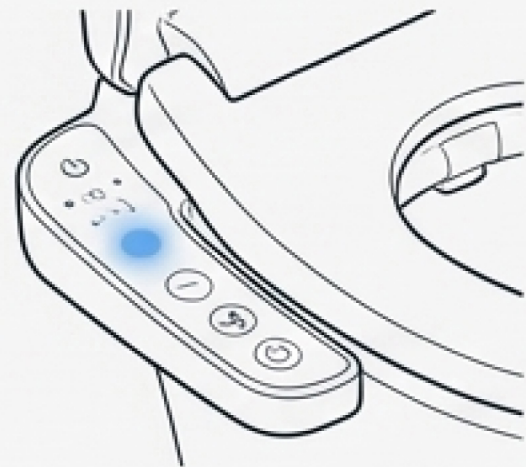

2. Check the indicator:
Confirm that the status indicator on the seat lights up.

Water

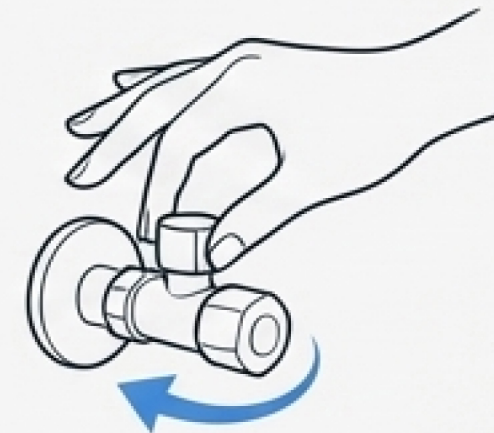

1. Open the valve: Check that the water inlet angle valve is fully open.




2. Check for leaks: Inspect the hose and connections to make sure there are no drips.



Warning! Use only a 220V AC power supply. Make sure the socket has a working earth connection to prevent electric shock.

Control at Your Fingertips: Using the Rotary Knob

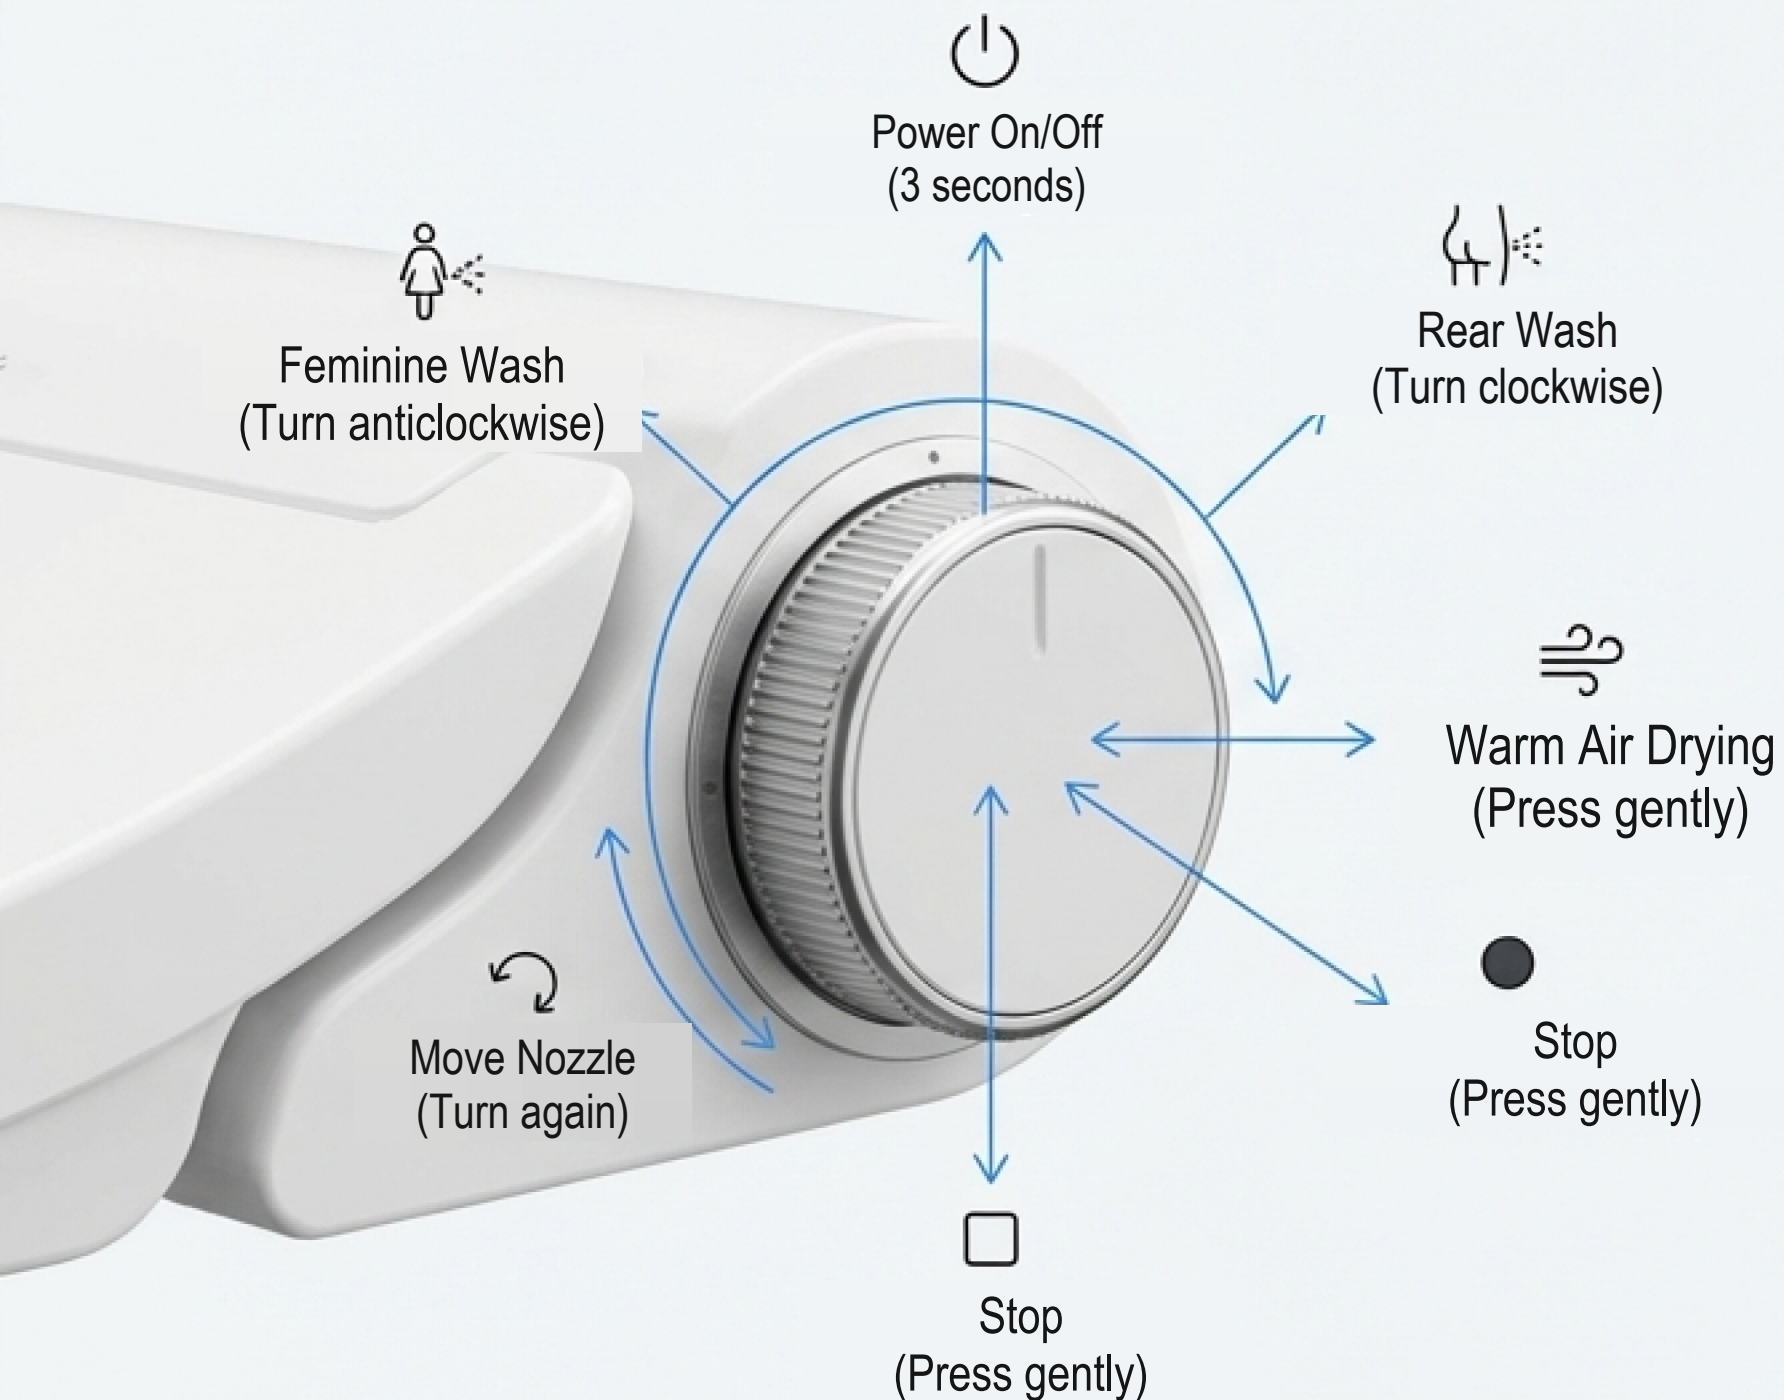

Main Functions



- **Power On/Off:** Press and hold for 3 seconds.
- **Rear Wash:** Sit down, then briefly turn the knob clockwise.
- **Feminine Wash:** Sit down, then briefly turn anticlockwise. Turn again in the same direction to move the nozzle.
- **Warm Air Drying:** Sit down and gently press the knob.
- **Stop:** Gently press the knob to stop any function in progress.



Important: You must be seated to activate the washing and drying functions. The seat sensor ensures safe use.

Your Personal Control Centre: Mastering the Remote



Blue Zone: Cleaning Functions

- **Feminine Wash:** Starts the front wash.
- **Rear Wash:** Starts the rear wash.
- **Nozzle Self-Cleaning:** Activates the spray nozzle cleaning cycle.
- **Water Pressure:** Increases or decreases the pressure.



Orange Zone: Comfort Functions

- **Warm Air Drying:** Starts drying.
- **Temperature (Seat/Water/Air):** Buttons to adjust the temperature.
- **Night Light:** Turns the ambient light on or off.



Green Zone: Seat Functions

- **Open/Close Lid and Seat:** Controls for automatic opening.
- **Energy Saving (ECO):** Activates low-power mode.

Smart Features That Work for You



Seat Sensor

The spray nozzle and other key functions activate only when they detect that you are seated. This prevents accidental activation and splashes. Make sure you are properly positioned on the seat.



Energy-Saving Mode

The system intelligently reduces the seat and water temperature when not in use. It automatically enters sleep mode after 3 minutes of inactivity. Simply sit down to wake it up.




Soft Closing

The lid and seat ring have a soft-close damper. This prevents slamming and noise, ensuring smooth, quiet closing every time.


Care and Maintenance: Keep Your Seat Spotless

Steps for Safe Removal and Cleaning:

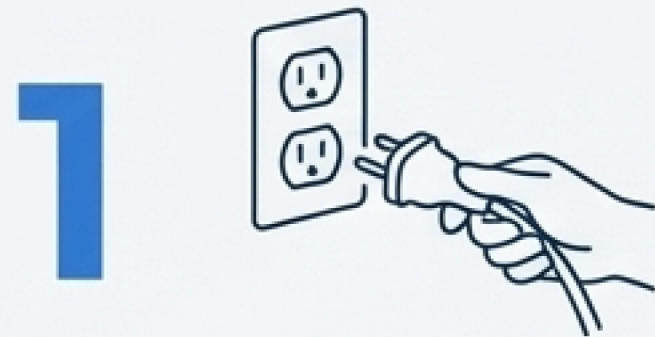


Unplug

Remove the plug from the socket before handling the product.

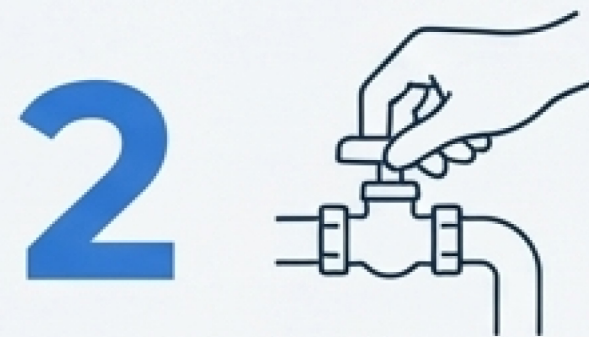

Turn Off the Water

Close the inlet valve to stop the water supply.

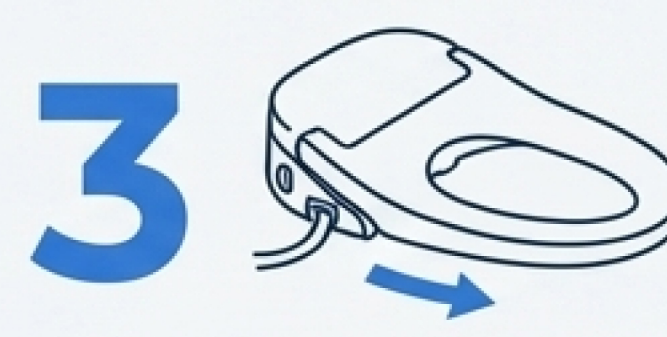

Release the Seat

Press the side latch and slide the seat forwards.



Clean

Place the seat on a soft cloth and clean it with a soft, damp sponge.



Do Not Use Abrasive Products

Avoid diluted kitchen detergents, scouring powders and nylon brushes. They can damage the plastic.



Do Not Turn It Upside Down

Never turn the seat over without unplugging it. Do not place it directly on the floor, to avoid scratches.

Quick Fixes: Troubleshooting Common Problems

Common Problem	Likely Cause	Simple Solution
 No Water Spray	The nozzle filter is clogged. You are not seated correctly. The water inlet valve is closed.	Run the Nozzle Cleaning function. If the problem persists, gently clean the nozzle with a damp cloth. Adjust your position on the seat to activate the sensor. Fully open the water inlet valve.
 Water or Seat Is Not Warm	The temperature has not been set.	Use the remote control to press the water/seat temperature button until you reach the desired setting.
 Remote Does Not Work	The batteries are flat.	Replace the remote control batteries.

Note: If the problem persists after these checks, please contact technical support.

Your Journey to Comfort Has Begun




You have installed and personalised your smart toilet, and learned how to care for it. Now you are ready to enjoy a new standard of hygiene, well-being and personal comfort every day.

How It Works Inside

A look inside your smart toilet

Rotary Knob and Operating Buttons

Note: These functions are optional and may vary depending on the model purchased.

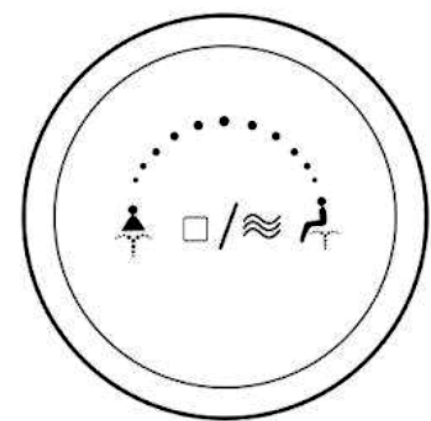


Small display

Image for reference only

When the display lights up, the device is on. When it is off, the smart seat is switched off or in sleep mode.

Cleaning and drying: The display shows the active function.

Display Indicators

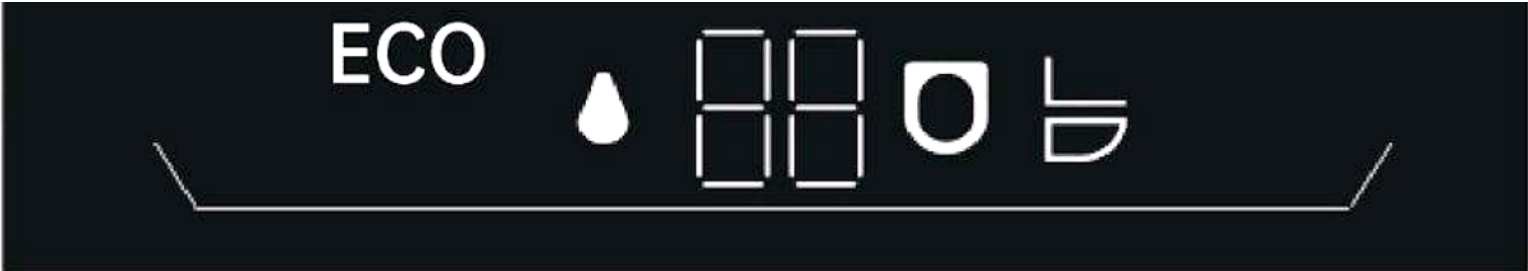


Indicator	Meaning
Display on	The device is switched on.
Display off	The smart seat is switched off or in sleep mode.
Cleaning / drying	The display shows the selected function while it is running.
ECO	The ECO light indicates that energy-saving mode is active.

Using the Rotary Knob

Action	What It Does	Condition
Press and hold for 3 seconds	Turns the device on or off.	Before sitting down.
Briefly turn clockwise	Starts the rear wash. Turn again to activate nozzle movement/oscillation.	You must be seated.
Briefly turn anticlockwise	Starts the feminine wash. Turn again to activate nozzle movement/oscillation.	You must be seated.
Press gently during washing	Starts warm air drying.	You must be seated.
Press gently during an active function	Stops the function currently running.	Acts as the stop button.

Large Remote Control

Note: These functions are optional and may not be available on every model.

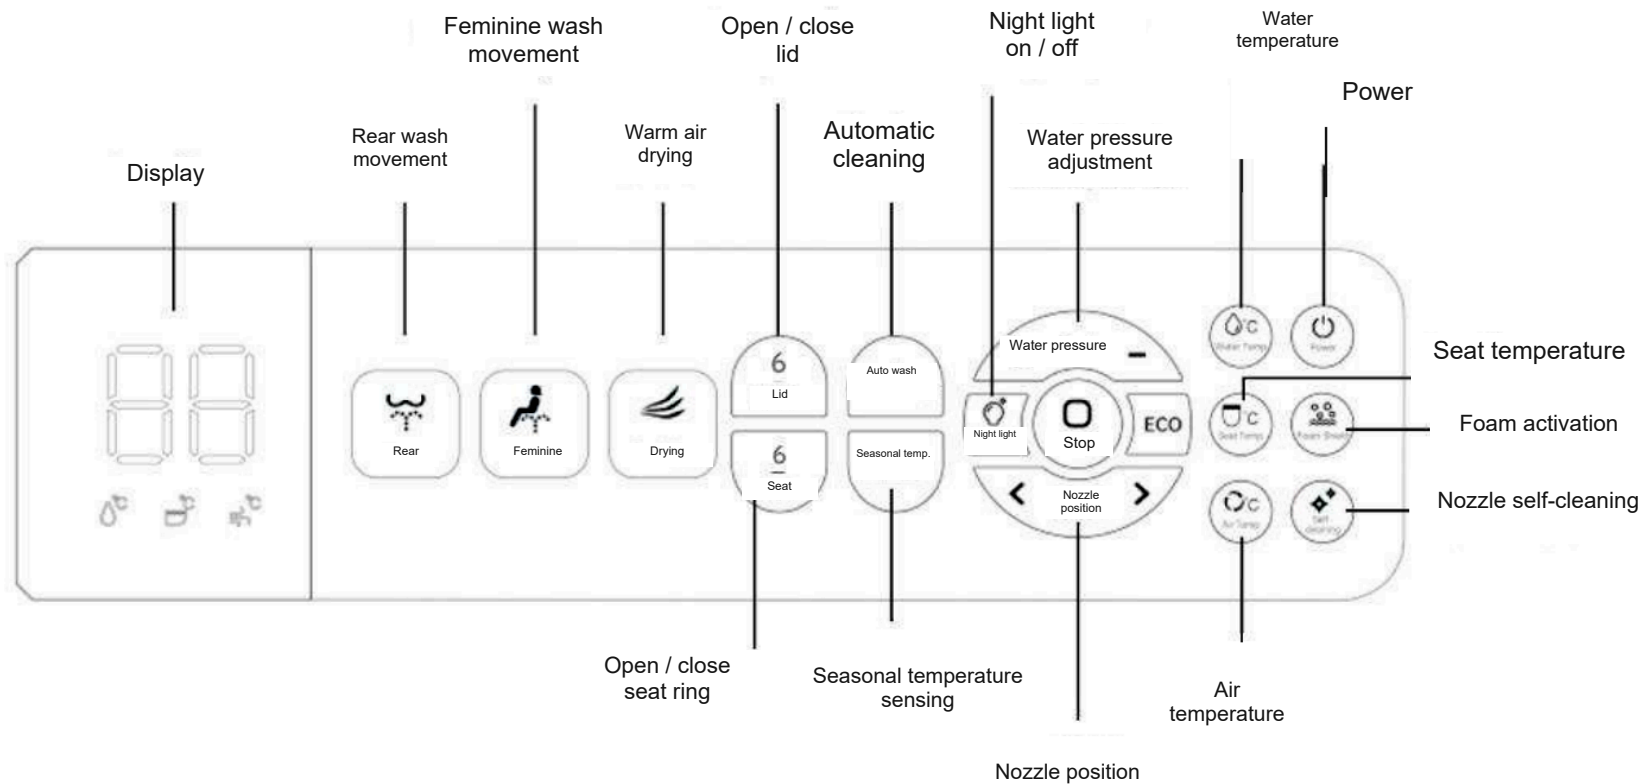

Main Remote Control Functions

Area / Button	Function
Display	Shows the selected settings, such as temperature or position.
Rear wash / feminine wash	Starts the selected wash. Some models support nozzle movement.
Warm air drying	Starts drying after washing.
Lid / seat	Opens or closes the lid and seat ring, if supported by the model.
Self-cleaning	Cleans the spray wand/nozzle.
Water pressure	Increases or decreases the pressure during washing.
Temperatures	Adjusts the water, seat and air temperatures.
Nozzle position	Moves the nozzle forwards or backwards to adjust the wash.
ECO / night light / foam	Activates additional functions available on the model.

Advanced Settings for the Large Remote Control


Important: These are advanced settings. Use them only if you need to change how the device operates. To confirm a setting, switch the device back on when instructed.

Setting	Instructions
1. Lid and seat opening/closing force	Switch the device off using the remote. Within 3 seconds, press the nozzle forward button to enter the setting. Use forward to increase the force and backward to reduce it. Switch the device on to confirm.
2. Presence sensor: on or off	With the device on, press and hold the lid button for a few seconds. The device will confirm the change through movements or beeps, depending on the model.
3. Sensor detection distance	Switch the device off. Within 3 seconds, press the seat temperature button. Use nozzle forward/backward to increase or reduce the detection distance. Switch the device on to confirm.
4. Automatic foam: on or off	Switch the device off. Within 3 seconds, press and hold the foam button. One beep means off; two beeps mean on. Switch the device on to confirm.
5. Foam / bubble duration	Switch the device off. Within 3 seconds, press the water temperature button to enter the setting. Press again to cycle up through the levels. Switch the device on to confirm.
6. Infrared therapy: on or off	Switch the device off. Within 3 seconds, press the rear wash button. One press disables the function; two presses enable it. Switch the device on to confirm.
7. Automatic seasonal temperature	Switch the device off and enter settings mode. Press the seat temperature button. One beep means off; two beeps mean on. Switch the device on to confirm.
8. Remote control pairing / alignment	Turn the knob on the device towards rear wash until you hear a long beep. Then press any button on the remote control to complete pairing.
9. Restore factory settings	With the device on, press and hold the remote control power button for a few seconds to restore the factory settings.



Activa tu garantía y servicio técnico Nashi

Escanea el QR y registra tu inodoro en la aplicación SAT

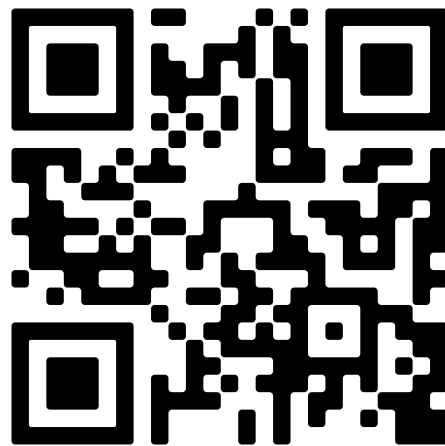

Registro rápido para garantía, asistencia y manuales

ESPAÑOL

Escanea el QR y registra tu inodoro Nashi para activar la garantía y el servicio técnico. Ten a mano tu factura y el número de serie. Desde la aplicación podrás gestionar SAT, tickets, manuales y asistencia postventa.

ENGLISH

Scan the QR code and register your Nashi toilet to activate the warranty and technical support. Keep your invoice and serial number ready. From the app you can manage support, tickets, manuals and after-sales assistance.

FRANÇAIS

Scannez le QR code et enregistrez votre toilette Nashi pour activer la garantie et le service technique. Préparez votre facture et le numéro de série. Depuis l'application, vous pourrez gérer le SAV, les tickets, les manuels et l'assistance.

ITALIANO

Scansiona il QR code e registra il tuo WC Nashi per attivare la garanzia e l'assistenza tecnica. Tieni a portata di mano fattura e numero di serie. Dall'app potrai gestire assistenza, ticket, manuali e post-vendita.

DEUTSCH

Scannen Sie den QR-Code und registrieren Sie Ihr Nashi-WC, um Garantie und technischen Service zu aktivieren. Halten Sie Rechnung und Seriennummer bereit. In der App verwalten Sie Service, Tickets, Handbücher und Kundendienst.